


Features:


1. Works with FSK/DTMF systems
2. One base can register up to 3 cordless handset
3. 52 incoming and 8 outgoing memory on base
4. 55 incoming and 8 outgoing memory on cordless handset
5. 4 speed dialing on base and 1 speed dialing on cordless handset
6. 10 two-touch memory dialing on cordless handset
7. Volume control on cordless handset
8. Conference
9. LCD contrast
10. Add 0 for calling back from memory
11. 2 sets alarm clock on cordless handset
12. Base unit can work even power failure

Legend: Base

1. LINE IN
2. DC POWER
3. RING VOLMEN
4. HANDSFREE VOLUME
5. M4
6. M3
7. M2
8. M1
9. HANDSET
10. UP
11. CID CHECK
12. CODE
13. SET
14. IN USE IND.
15. FLASH/DELETE
16. REDIAL/PAUSE
17. HANDSFREE DIAL
18. HS 1
19. HS 2
20. HS 3
21. ANTENNA
22. DOWN
23. KEYPAD


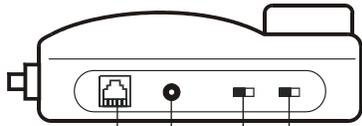


1 2 3 4

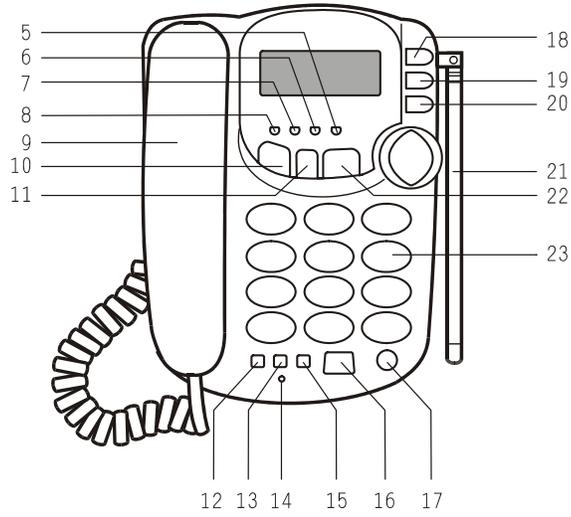

Legend: Cordless Handset

1. DC POWER
2. ANTENNA
3. TALK
4. CHECK/CHANNEL
5. FLASH
6. KEYPAD
7. */ ▼ KEY
8. INTERCOM
9. CODE
10. CHARGER
11. SET/VOLUME
12. REDIAL
13. #/ ▲ KEY
14. STORE
15. M1
16. IN CHARGE IND.

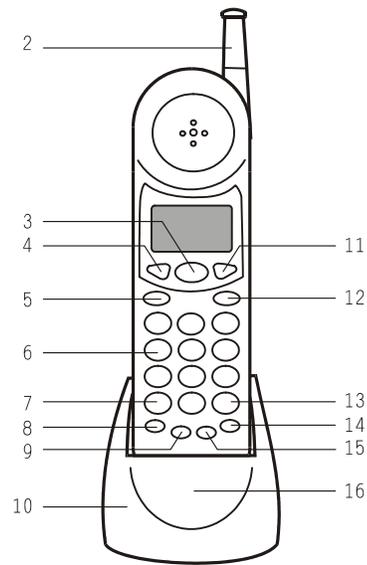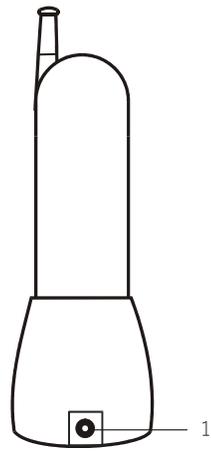

Installation:

(Please read the manual carefully prior to initial use)

Base:

1. Connect the coiled cable into the handset and connect the other end of coiled cable to the base unit
2. Connect the supplied telephone cable into the LINE IN jack on the rear of the base and connect the other end of supplied telephone cable into the telephone outlet.
3. Plug the AC 110V, DC 9V/300mA adapter into the power outlet. Plug the other end of adapter into the POWER jack on the rear of the base unit.

Cordless Handset:

1. Remove the battery compartment cover on rear of the cordless handset by pressing the top of the cover and slide it down.
2. Insert the battery pack into the battery compartment of the cordless handset.
3. Replace the compartment cover.
4. Plug the AC110V, DC 9V/300mA adapter into the power outlet and plug the other end of the adapter into the POWER jack on the rear of the charger.

SETTING:

Read it carefully for initial use

All setting should be done in standby mode

Code Setting:

The code is default in factory, If cordless handset loose link with base unit or you have extra cordless handset for setting.

1. Press and hold CODE key on both base unit and cordless handset until a beep sound is heard. The left corner of cordless handset LCD will display HS 01 to confirm the setting.
2. To set the other handset in the same way as stated above.

BASE:

IP Setting:

1. Press and hold SET key until the LCD displays AIP-1 OFF.
2. Press your IP number (up to 6 digits)
3. Press Flash/DEL key to delete the wrong number or press SET key to confirm the setting. NOTE: Every time you dial the number beginning with 0, the stored IP code will be automatically dialed out first. (The unit does not provide this function)

Local Code Setting:

1. Press and hold SET until the LCD displays AIP-1 OFF to enter setting mode.
2. Press SET key repeatedly until the LCD displays LOCAL OFF
3. Press the local code number then press SET to confirm the setting or press FLASH/DEL to edit the wrong number.

NOTE: The first digit 0 should be ignored while setting the area code. For example set 2 for Taipei, 7 for Kaouhsung, 03 for I-Lan. After setting you can call back the number from memory directly.

Ring Melody Setting:

1. Press and hold SET key until LCD display AIP-1 OFF.
2. Press SET repeatedly until the LCD displays bELL [03] .
3. Press UP or DOWN key to select the ring melody.
4. Press SET key to confirm the setting. (00 is for off)

LCD Contrast:

1. Press and hold SET key until the LCD displays AIP-1 OFF
2. Press SET key repeatedly until the LCD displays LCd [02]

3. Press UP or DOWN key adjust the contrast.
4. Press SET key to confirm the setting

Flash Time Setting:

1. Press and hold SET key until the LCD displays AIP-1 OFF
2. Press SET repeatedly until the LCD displays FLASH [06].
3. Press UP or DOWN key to adjust the flash duration.
The unit supplies with 100-800ms duration.
(00-08 stands for 100-800 ms duration)

Time Setting:

1. Press and hold SET key until the LCD displays AIP-1 OFF
2. Press SET key repeatedly until LCD displays dAtE and the month is flickering
3. Press UP or DOWN key to adjust the month.
4. Press SET the date will be flickering.
Repeat the same steps to adjust the date and time.
5. Press SET key to confirm the setting.

CORDLESS HANDSET:**Call Blocking Setting:**

1. Press and hold SET/VOLUME key until the LCD displays SLEEP [00]
2. Press */▼ key or #/▲ key to adjust the blocking time from 1-16 hours (00 is for off)
3. Press SET/VOLUME key to confirm the setting

Clock Setting: (Clock 1)

1. Press and hold SET/VOLUME key until LCD displays SLEEP [00]
2. Press SET/VOLUME key repeatedly until the LCD displays ALR-1 OFF.
3. Press the numbers to set hour and minute
4. Press FLASH key to delete or turn off the alarm. (LCD will display ALR-1OFF) or press SET/VOLUME to confirm the setting

Clock Setting: (Clock 2)

1. Repeat the above steps to enter ALR-2 OFF for clock 2 setting.

IP Setting:

1. Press and hold SET/VOLUME key until LCD displays SLEEP [00]
2. Press SET/VOLUME repeatedly until the LCD displays IP-OFF
(Cordless handset does not supplied with the function)

Ring Melody Setting:

1. Press and hold SET/VOLUME key until the LCD displays SLEEP [00]
2. Press SET/VOLUME repeatedly until the LCD displays bELL [03]
3. Press]Press */▼ or #/▲ key to select the ring melody
4. Press SET/VOLUME key to confirm the setting (00 is for off, 01-20 is for 20 kinds of melody)

LCD Contrast:

1. Press and hold SET/VOLUME until the LCD displays SLEEP [00]
2. Press SET/VOLUME key repeatedly until the LCD displays LCd [2]
3. Press */▼ or #/▲ key to adjust the contrast
4. Press SET/VOLUME to confirm the setting

Time Setting:

1. Press and hold SET/VOLUME key until the LCD displays SLEEP[00]
2. Press SET/VOLUME repeatedly until the LCD displays dAtE and the month is flickering
3. Press */▼ or #/▲ key to adjust the month
4. Press SET/VOLUME to confirm the setting and DATE is flickering.

5. Use the same way to set date and time
6. Press SET/VOLUME to confirm the setting

OPERATION

To Receiving a Call:

Pick up the handset from the base or pick up the cordless handset and press TALK key while the unit is ringing. Hang up the handset or press TALK key on the cordless handset after finishing talking.

To Make a Call:

Base:

1. Pick up the handset or press HANDSFREE key to wait for dialing tone
2. Press the desired number
3. Hang up the phone after finishing talking.

Cordless Handset:

1. Pick up the handset and press TALK key to wait for dialing tone.
2. Press desired number.
3. Press TALK key again after finishing talking

To Preview the Dialed Number:

1. Press the desired number when the unit is in standby mode.

2. Press FLASH/DELETE key to delete the wrong number (REDIAL/PAUSE key is for PAUSE under this mode)
3. Press HANDSFREE key on the base unit or TALK key on the cordless handset. The unit is now automatically dialing out the desired number.

Flash and Redial:

If the called party is busy. Press FLASH/DEL key to get the dialing tone then press REDIAL key to redial the last number

Pause:

Press REDIAL/PAUSE key during dialing. The LCD will display "P" for 3.6 seconds pause between each number dialed. The pause only features with PABX for getting the line

To Review Incoming Calls and Call Back:

Base:

1. Press CHECK key then press UP or DOWN key to browse the inbound numbers.
2. Press HANDSFREE key to dial out the number then pick up the phone for talking.
3. Press 0 as mobile phone or long distance call prefix for calling back from memory
4. Press and hold FLASH/DEL key until a

- beep sound is heard to delete the number
5. Press FLASH/DEL key continuously to delete all incoming call numbers.
 6. Press CID key to revert to standby mode

Cordless Handset:

1. Press CHECK/CHANNEL key then press */▼or #/▲ key to browse the inbound numbers
2. Press TALK key the number will be automatically dialed out then pick up the phone for talking or
3. Press 0 as mobile phone or long distance code prefix then press TALK key for calling back
4. Press and hold FLASH key until a beep sound is heard to delete the number
5. Press FLASH key continuously to delete all incoming call numbers.
6. Press CHECK key to revert to standby mode

To Review Outgoing Calls and Redial:

1. Press REDIAL/PAUSE key on the base unit or press REDIAL key on the cordless
2. Press UP or DOWN key on the base unit

- or press*/▼ or #/▲ key on the cordless handset to check the dialed number
3. Press HANDSFREE key on the base unit or press TALK key on the cordless handset the unit will automatically dial the desired number
 4. Press FLASH/DEL key on the base unit or press FLASH key on the cordless handset to delete the number or press it continuously to delete all outgoing numbers.

Channel Selection:

The unit provide 10 channel selection on cordless handset.

Press CHECK/CHANNEL key to select the channel for better voice quality.

To Transfer Calls:

Base to Cordless Handset:

1. During a phone conversation on the base, press HS1 (HS2 or HS3). The cordless handset will ring
2. Hang up the handset to base unit.
3. Press the TALK key on the cordless handset. The outside line will be automatically transferred to the cordless handset.
4. Press TALK key again after finishing talking

Cordless Handset to Base:

1. During a phone conversation on the cordless handset, press INTERCOM then press 0 . The base unit will ring
2. Pick up the handset from the base unit and press TALK on the cordless handset and hang up. The outside line is transferred to base unit.

To transfer between Cordless Handsets

1. During a phone conversation on the cordless handset Press INTERCOM key then press number 1, 2 or 3 (this is your cordless handset number)
2. Press TALK key after the transferred cordless handset is ringing.

Intercom:**Base to Cordless Handset:**

1. Make sure both base unit and cordless handset are in standby mode
2. Press HS1 (HS2 or HS3) on the base unit
3. Press INTERCOM key on the cordless handset for talking when ringing.
4. Press INTERCOM key on the cordless handset again after finishing talking.

Cordless Handset to Base:

1. Make sure both base unit and cordless

handset are in standby mode.

2. Press INTERCOM key on the cordless handset, both base unit and cordless handset will ring
3. Pick up the handset to talk

Conference:

1. Press CODE key on the base unit when it's on line
2. Press HS1 (HS2 or HS3) both base unit and cordless handset will ring. The LCD will display △.
3. Press TALK key on the cordless handset for three way conversation.

Memory:

1. Press the desired number when the cordless handset is in standby mode.
2. Press STORE key, the LCD will display
3. Press any digit from 0-9 to select the location of setting.
4. A beep sound will be heard to confirm the setting. (cordless handset can store up to 10 sets of number each number can be up to 20 digits)

To Check and Dial out from memory:

1. Press STORE key the LCD will display
2. Press */▼ key or #/▲ key to browse the number.

3. Press TALK key to dial out the desired number or press STORE key again to revert to standby mode.

Speed Dialing :

To Store Numbers:

1. Press a desired number then hold M1 (M2, M3 or M4) key until a beep sound is heard.

To Check or Dial Out the Stored Number:

Base:

1. Press M1 (M2, M3 or M4) key when the unit is in standby mode.
2. Pick up the phone for talking.

Cordless Handset:

Press M1 key, the cordless handset will automatically dial the number.